



## COASTAL SLIDING WINDOWS

### 300 Series Slider

#### CLEANING

**Vinyl Frames and Sashes**—simply use a mild, nonabrasive soap and water solution to clean your vinyl frames and sashes. NEVER use chlorine bleach, liquid grease remover, nail polish remover (acetone) and other harsh or abrasive cleansers, detergents and solvents. **Glass**—use a mixture of mild dish soap and water, then rinse completely with clear water and wipe dry with a soft cloth.

**Screen Removal**—slider screens are mounted on the exterior of the window. The screen is held in place by springs on the top. To remove the screen, grasp the pull-tab located on the side of the screen and slide the screen open. Then grasp the screen frame towards the bottom and lift up and outward. **Screen Cleaning**—to clean your screens of dust and light debris once they are removed, gently scrub with mild soap and a soft brush. Screens should be rinsed to remove dirt and soap residue. Be sure that screens are dry before they are re-installed.

#### OPERATION

**To open the window**, unlock the lock located in the middle of the sash. Slide the window open. **To close the window**, slide the sash back to the closed position and lock the window.

#### MAINTENANCE

Keep the sill free of dirt and debris. Lubricate the sill rails with a teflon spray every other month.

## COASTAL C-40 SLIDING WINDOWS

### 500 Series High-Performance Slider (C-40)

#### CLEANING

**Vinyl Frames and Sashes**—simply use a mild, nonabrasive soap and water solution to clean your vinyl frames and sashes. NEVER use chlorine bleach, liquid grease remover, nail polish remover (acetone) and other harsh or abrasive cleansers, detergents and solvents. **Glass**—use a mixture of mild dish soap and water, then rinse completely with clear water and wipe dry with a soft cloth.

**Screen Removal**—slider screens are mounted on the exterior of the window. The screen is held in place by springs on the top. To remove the screen, grasp the pull-tab located on the side of the screen and slide the screen

open. Then grasp the screen frame towards the bottom and lift up and outward. **Screen Cleaning**—to clean your screens of dust and light debris once they are removed, gently scrub with mild soap and a soft brush. Screens should be rinsed to remove dirt and soap residue. Be sure that screens are dry before they are re-installed.

#### OPERATION

**To open the window**, unlock the lock located on the window handle by lifting the thumb latch to the up position. Slide the window open. **To close the window**, reverse the steps.

#### MAINTENANCE

Keep the sill free of dirt and debris. Lubricate the sill rails with a teflon spray every other month.

## COASTAL PICTURE & SPECIALTY WINDOWS

### 500 Series High Performance Picture & Specialty Picture Windows, 200 Series Picture & Specialty Picture Windows

#### CLEANING

**Vinyl Frames and Sashes**—simply use a mild, nonabrasive soap and water solution to clean your vinyl frames and sashes. NEVER use chlorine bleach, liquid grease remover, nail polish remover (acetone) and other harsh or abrasive cleansers, detergents and solvents. **Glass**—use a mixture of mild dish soap and water, then rinse completely with clear water and wipe dry with a soft cloth. Since the window is fixed, the exterior must be cleaned from the outside.

#### OPERATION

Picture and Specialty Picture windows do not open.

#### MAINTENANCE

Since the window is fixed, no special maintenance beyond cleaning is required.