



COASTAL SLIDING LANAI DOORS

500 Series High-Performance Sliding Doors (C-40)

CLEANING

Vinyl Frames and Sashes—simply use a mild, nonabrasive soap and water solution to clean your vinyl frames and sashes. NEVER use chlorine bleach, liquid grease remover, nail polish remover (acetone) and other harsh or abrasive cleansers, detergents, and solvents.

Glass—use a mixture of mild dish soap and water, then rinse completely with clear water and wipe dry with a soft cloth.

Screens—

Screen Removal—sliding door screens are mounted on the exterior of the door and can be removed from the outside. To remove the screen, unlatch the screen lock and slide the screen open. Lift the screen up to clear the wheels from the bottom screen track. Then tilt the bottom of the screen toward you (exterior) and pull down to release it from the screen track header at the top.

Screen Cleaning—to clean your screens of dust and light debris once they are removed, gently scrub with mild soap and a soft brush. Screens should be rinsed to remove dirt and soap residue. Be sure that screens are dry before they are re-installed.

Install Screen—reverse the removal process to reinstall the screen. From the exterior, lift the top of the screen into the header track at the top. Swing the screen in to align the screen wheels with the top of the roller guide. Then lower the panel into place.

OPERATION

To open the door, unlock the lock located on the door handle by lifting the thumb latch to the up position. Slide the door open. **To close the door**, reverse the steps.

MAINTENANCE

Keep the sill free of dirt and debris. Lubricate the sill rails with a teflon spray every other month.
